


How to measure to purchase window wells

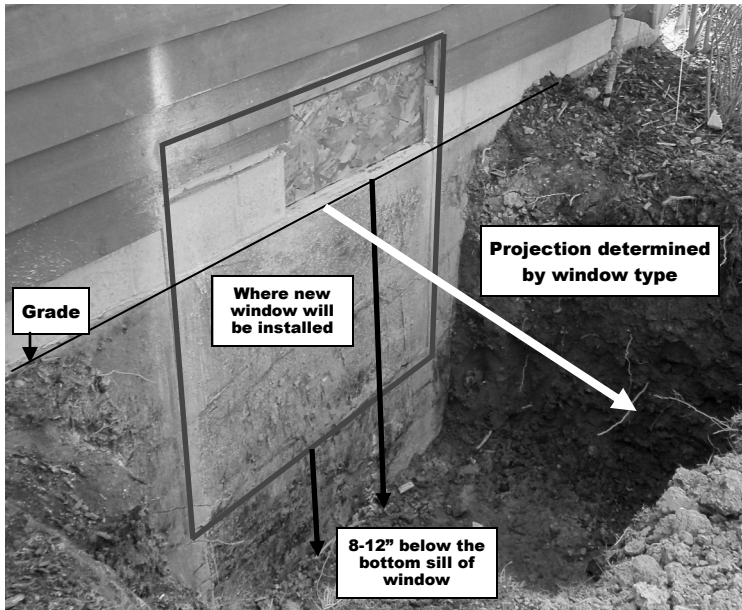

How to compensate for areas with high water flow.

Please consult local codes regarding window and window well installation. The width of the window well needs to be the width of the window plus a few inches on either side. Projection is determined by whether or not it needs to be an egress well. Egress windows need at least a 36" projection in the USA. Depth into ground is determined by the depth of the window below grade plus 8-12".



Standard window well installation